


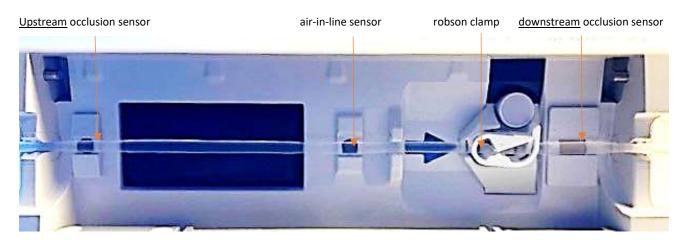

LOADING THE GIVING SET

- Open pump door by lifting latches upwards. Door opens toward you.
- Place line vertically within body of pump with Robson clamp closed.
- Close pump door
- Pump performs Stop Flow Test, confirming Arcomed giving set, correctly inserted.





PROGRAMMING/STARTING INFUSION

Select **ml/hr** or **V/T** by pressing on Touchscreen.

ml/hr

- Enter RATE in Rate Window
- Enter VTBI in Data Window
- Press START

V/T

- Enter VTBI in Data Window and confirm.
- Enter Time to be infused in Data Window and confirm.
- Press START

ALWAYS FOLLOW INSTRUCTION ON TOUCHSCREEN

- RATE window shows ml/hr when pump is infusing.
- DATA window will display cumulative dose administered when pump is infusing.
- TIME REMAINING COUNTS DOWN to end of infusion



- INFUSION HISTORY/TIME REMAINING
- Press Blue Drop icon in shortcut on touchscreen.
- Time remaining counts down (below icon)
- 1st page displays rate, VTBI, infused in ml, cumulative infused in ml, volume, and time remaining (dynamic) since infusion commenced.
- Press key II for 2nd page, displays date, time, event/log history (press down arrow for further pages)
- See also in Menu (i status/help).
- Records/retains previous 1500 events.

PRESSURE READING

- Line pressure: displays default pressure. Current pressure shown below pressure icon in shortcut on touchscreen.
- Can be raised/lowered according to clinical need/hard limits, will return to default when pump turned off/on.



- ZERO VOLUME
- Press STOP (stop infusion)
- Press Menu
- Press II (hard key)
- Zeroes cumulative volume.
- ALERTS & ALARMS
- Alert: pump is usually still infusing and is advisory eg power fail
- Alarm: the pump has stopped infusing eg occlusion, infusion near end, bag empty
- To silence auditory alarm press touchscreen or II
- Press START when problem addressed.
- Constant Alarm: internal error. Press/hold **ON/OFF** button until silences alarm. *Do not use on patient, return to EBME*.
- STANDBY MODE
- Briefly press the ON/OFF key once (infusion must be stopped)
- Pump will not alarm.
- Pump retains settings entered.
- To cancel standby, press touchscreen or briefly press ON/OFF key.



BOLUS/PRIME

- To prime line via pump (patient must be disconnected). PP giving sets cannot be auto primed due to AirLock.
- Bolus Function.